AIRFORMZ®
FESTIVE INFLATABLES
by Aqua-Leisure®

AirFormz® Festive Inflatable Instruction Manual

SET INCLUDES:

- AirFormz inflatable with blower unit and lights attached
- 4 Plastic stakes
- 1 metal fan stake
- 2 rope tethers with loop ends for securing to stakes
- Snap-on base support
- UL listed Class II power source

ADULT ASSEMBLY REQUIRED
READ AND FOLLOW ALL INSTRUCTIONS

IMPORTANT SAFETY NOTICE

When using electrical products, basic precautions should always be followed including the following:

1. When the Festive Inflatable is used in outdoor conditions, connect the inflatable into a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
2. This seasonal product is NOT intended for permanent installation or use.
3. DO NOT mount this inflatable or place it near gas or electric heaters, a fireplace, candles, or other similar sources of heat. Keep it away from all flame or heat sources.
4. DO NOT secure the wiring of the product with staples or nails, or place the Festive Inflatable on sharp hooks or nails.
5. DO NOT let internal light sources rest on the supply cord or on any wire.
6. Unplug the inflatable when leaving the house and when retiring for the night. Never leave the product operating unattended.
7. This inflatable is an electrical, decorative product, not a toy. To avoid risk of fire, burns and electric shock; the inflatable should not be played with or placed where children can reach it.
8. DO NOT use the inflatable for other than home decor.
9. DO NOT hang ornaments or other objects from the inflatable, cord, wire or light string.
10. DO NOT close doors or windows on the inflatable or extension cords as this may damage the wire insulation.
11. DO NOT cover the product with cloth, paper or any material not part of the product when in use.

END-OF-SEASON TAKE DOWN

1. Grasp plug on Blower Unit and remove from receptacle or outlet device.
2. Pull out metal stake that secures Blower Unit to ground
3. Remove stakes from ground and clean off any excess soil.
4. Remove tethers from stakes.
5. If inflatable is wet, allow it to air dry before folding back into back its box.

AIRFORMZ® FESTIVE INFLATABLE SET-UP

Congratulations on your purchase of an AirFormz® Festive Inflatable from Aqua-Leisure! With proper set-up and basic care of your Festive Inflatable, you will enjoy the inflatable for many seasons.

1. Select an area for set-up and layout all contents from package. The area should be generally flat, away from heavily traveled paths and free from obstructions such as wires, branches, etc.
2. Slide the Triangular Base Support onto Blower Unit and listen for a “click,” securing the two units together.
3. Plug Blower Unit into a 110v electrical supply outlet.
4. The character should fill with air in approximately two minutes.
5. Fasten to the ground for stability: thread one tether line through sewn loop near character’s middle on both sides of the inflatable (see illustration below).
6. Attach each loop on ends of tethers to each stake and press stakes into the ground – keeping equal tension on each line and spreading out the stakes as wide and evely as possible. This will help your inflatable to re-inflate to its proper position more easily each time of use.
7. Position character vertically, holding loop cord, place metal stake through center of loop and ensure top of stake rests on top of loop cord (see illustration).

AIRFORMZ® FESTIVE INFLATABLE SHUT-OFF

Turn off power of the Blower Unit by unplugging or turning outlet off at switch. Character will deflate. Leaving character staked in place will help it re-inflate more accurately.

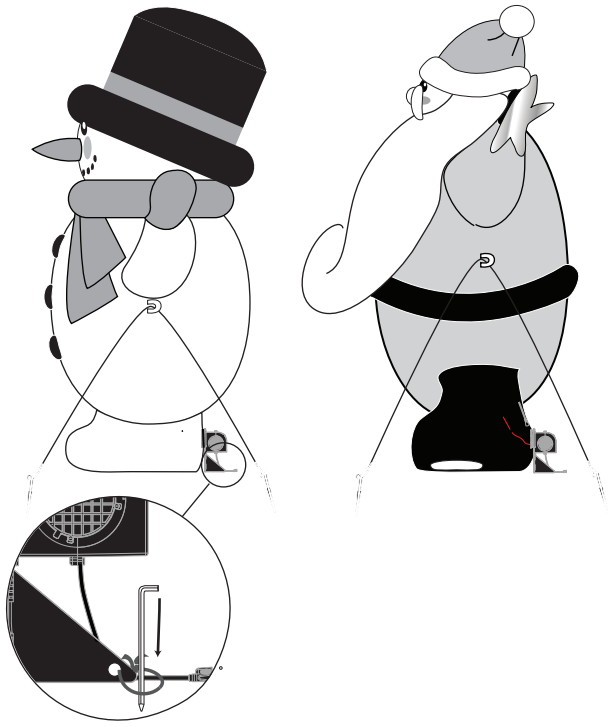

AIRFORMZ®

FESTIVE INFLATABLES
by Aqua-Leisure®

⚠ WARNING: ELECTRIC PRODUCT. Keep away from children. Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. To avoid the risk of electrical shock, always make sure the figure is unplugged from the electrical outlet before assembling, disassembling, or relocating.

⚠ WARNING: Electricity and water do not mix. Do not immerse product in water. Protect the electric Blower Unit and power cord from direct exposure to water to reduce the risk of electrical shock.

⚠ CAUTION: Do not inflate during unusually strong winds. If it becomes too windy for safe operation, allow the product to deflate, secure it, and use in better weather conditions.

⚠ CAUTION: To reduce the risk of fire, do not reposition internal LED lighting units.

AIRFORMZ® FESTIVE INFLATABLE CARE

- Before each use, inspect product carefully for tears.
- Discard **IMMEDIATELY** any product that has cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connections or exposed copper wire.
- For best results, do not run your Festive Inflatable for more than 8 hours at a time.
- The Festive Inflatable is surface washable with a damp cloth and soap.
- When storing the product, carefully remove it from wherever it is placed, including trees, branches, or bushes to avoid any undue strain or stress on the product conductors, connections, and wires.
- Be sure the product is dry and clean before storing it in a cool, dry place, away from direct sunlight.

WARRANTY

PLEASE DO NOT RETURN THIS PRODUCT TO RETAILER

Providing you with quality products is important to us. If your inflatable has a manufacturing defect, kindly contact us within 30 days of your purchase. Please have available your proof of purchase when you call or e-mail us at the following:

Call our Customer Service Team at 1-866-807-3998 (toll-free) from 8:30 AM to 5:30 PM EST (Mon.-Fri.)

E-mail us at customercare@aqualeisure.com

TROUBLESHOOTING CHECKLIST

If your Festive Inflatable is not inflating, please check the following:

- The power source is interrupted or the cord may be unplugged.
- The power cord has become unattached. Open the zipper near the Blower Unit and check that the Internal Power Cord from the Blower is attached to the Control Unit.
- Zipper may be open, allowing air to leak from the inflatable. If open, zip closed.
- Blower airflow may be obstructed. If so, shake out any debris – never attempt to disassemble blower unit.

AIR12509
SANTA

AIR12511
PLOAR BEAR

Save manual for future reference

AIR12508
REINDEER

AIR12510
SNOWMAN

Aqua-Leisure Industries, Inc. P.O. Box 239, Avon, MA, 02322 USA

6.6.2017

PRINTED IN CHINA